

ICF-SW40

SERVICE MANUAL



*US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Tourist Model*

SPECIFICATIONS

Circuit system:

FM: Super heterodyne
SW/MW/LW: Dual conversion super heterodyne

Frequency range:

FM: 76.00-108.00 MHz
87.50-108.00 MHz¹
SW: 3850-26100 kHz
MW: 530-1620 kHz
LW: 150-285 kHz

Intermediate frequency

FM: 10.7 MHz
SW/MW/LW: 10.7 MHz (1st)
450 kHz (2nd)

Speaker:

Approx. 66 mm (2 1/4 in.) diameter, 8 Ohms

Maximum output:

240 mW (at 10% harmonic distortion)

Output:

□ (headphone) jack (stereo minijack) 16 Ohms

Power requirements:

DC 4.5 V, three R6 (size AA) batteries

External power source:

DC 4.5 V

Dimensions (w/h/d)

Approx. 170 x 106 x 35 mm
(6 3/4 x 4 1/4 x 1 7/16 in.) incl. projecting parts

Mass:

Approx. 410 g (14.5 oz.) incl. batteries

Supplied accessories:

Carrying case (1)
Shortwave Guide (1)

Optional accessories:

AC power adaptor AC-F45 HG²
Car battery cord DCC-E2451 IG
SW/MW/LW wide-range antenna
AN-1, AN-102

Your dealer may not handle all of the above listed optional accessories. Please ask your dealer for detailed information on the optional accessories available in your country.

Design and specifications are subject to change without notice.

¹ For the Italian and Saudi Arabian models only.

² The operating voltage for the AC power adaptor's depending upon the country in which it is sold. Therefore, purchase the AC power adaptor in the country you intend to use it.



FM STEREO/SW/MW/LW
PLL SYNTHESIZED RECEIVER
SONY®

TABLE OF CONTENTS

Section	Title	Page
	Specifications	1
	Servicing Note	2
1. GENERAL		
	Location of Controls	3
	Operating the Radio	4
	Setting the Standby	5
	Setting the Sleep Timer	6
	Using Other Functions	6
	Setting the Clock	6
2. DISASSEMBLY		
	2-1. Cabinet (Rear) Removal	7
	2-2. Key Board and Main Board Removal	7
3. ELECTRICAL ADJUSTMENTS		8
4. EXPLANATION OF IC TERMINALS		11
5. DIAGRAMS		
	5-1. Printed Wiring Boards	13
	5-2. Schematic Diagram	17
6. EXPLODED VIEW		22
7. ELECTRICAL PARTS LIST		23

Features

- FM stereo/SW/MW/LW portable receiver with worldwide band coverage
- Quartz-controlled PLL (Phase Locked Loop) synthesizer system using a microcomputer for easy pinpoint tuning
- Presetting of up to 20 stations for quick tuning
- Dual timer standby function to receive your favorite broadcast at the desired time
- Sleep timer to turn the radio off automatically after a specified number of minutes
- FM stereo reception through stereo headphones (not supplied)

SERVICING NOTE

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

• HOW TO CHANGE THE CERAMIC FILTERS

This model is used two ceramic filters of CF2, CF4.

You must use same type of color marked ceramic filters in order to meet same specifications.


Therefore, the ceramic filter must change two pieces together since it's supply two pieces in one package as a spare parts.

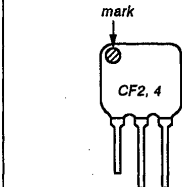	Mark	Center frequency
	red	10.70MHz
	blue	10.67MHz
	orange	10.73MHz
	black	10.64MHz
	white	10.76MHz

SECTION 1 GENERAL


1-1. LOCATION OF CONTROLS

Front, Right Side

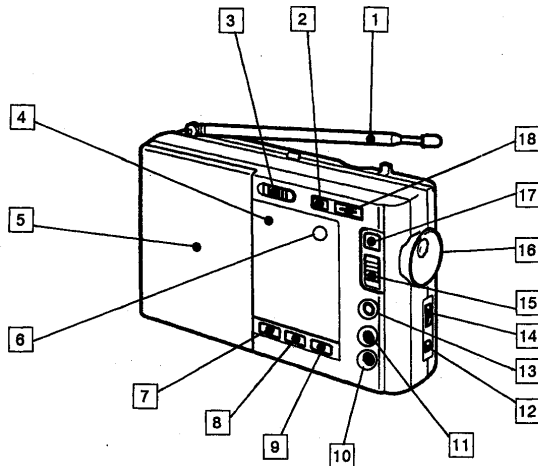

- 1 Telescopic antenna
- 2 SLEEP button
- 3 HOLD → button
- 4 Display window
- 5 Speaker
- 6 TUNE (tuning) indicator
- 7 SW button
- 8 LW/MW button
- 9 FM button
- 10 ENTER/CLOCK button
- 11 DISPLAY MODE button
- 12 TONE (NEWS ↔ MUSIC) selector knob
- 13 LIGHT button
- 14 VOL knob
- 15 NORMAL/FINE selector knob
- 16 TUNING/TIME ADJ knob
- 17 PRESET/MANUAL button
- 18 POWER ON/OFF button

Rear, Left Side

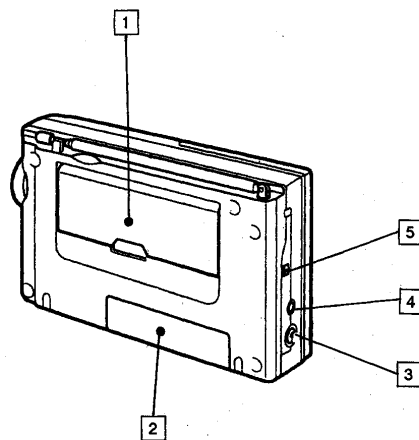

- 1 Stand
- 2 Battery compartment
- 3 DC IN 4.5V (external power input) jack
- 4 (phones) jack (stereo mini)
- 5 SENS (DX ↔ LOCAL) knob

Operating the Radio

Before operating the radio, make sure of your location. If in North or South America, the MW Channel Step must be changed.

- Refer to "Changing the MW Channel Step" when changing the MW tuning frequency step.

Manual tuning

- 1 Press **POWER** to turn on the radio.
- 2 Press either **SW**, **LW/MW**, or **FM** to select the desired band.
Each time **SW** is pressed, the indicator moves up one meter band.
- 3 Turn the **TUNING/TIME ADJ** control to tune in the desired station.
The indicator moves in accordance with the frequency number, enabling you to use it to select the station.
When a broadcast is received, the red **TUNE** lamp is illuminated.

- 4 Turn the **VOL** control to adjust the volume.

To turn off the radio, press **POWER**.

About tuning step

The frequency step employed by the **TUNING/TIME ADJ** control to tune in stations can be changed with the **NORMAL/FINE** selector. The selector should usually be set to **NORMAL**. Switching to **FINE** permits finer tuning.

NORMAL: The tuning step is 9 kHz for LW, 9 kHz (or 10 kHz) for MW and 5 kHz for SW. The step for FM is 0.1 MHz. The steps widen when the control is turned quickly.

FINE: The tuning step for LW/MW and SW is 1 kHz, and that for FM is 0.05 MHz. The steps widen when the control is turned quickly.

- To enjoy FM stereo reception, plug the stereo headphones to the $\odot$ (headphones) jack.
- When listening to news, set the **TONE** selector to **NEWS** for optimum results. Vocal output will be sharper and clearer. When listening to music, set it to **MUSIC** for optimum results.
- When interference is prevalent during reception, set the **SENS DX•LOCAL** selector to **LOCAL**. Under normal conditions, set it to **DX**.
- Reception of around 10250 kHz and 20500 kHz may be difficult because of extraneous internal signals generated by the built-in oscillators.

Preset tuning


This unit is factory-preset with 20 stations. You can preset up to 20 stations by assigning your favorite stations to the preset numbers 0 to 19.

Presetting stations


- 1 Manually tune in the station you wish to preset.
Refer to "Manual tuning" for more details.




- 2 Press and hold **ENTER/CLOCK** until you hear a beep and the preset number starts flashing.



- 3 Turn the **TUNING/TIME ADJ** control until the preset number (0 to 19) under which you wish to store the selected station is displayed.



- 4 Press **ENTER/CLOCK**.
A double-beep sounds and the preset number stops flashing.



To change the preset station

Follow the same procedure to store a new station to the selected preset number. The previous preset station is overwritten by the new preset station.


- When either **SW**, **LW/MW**, or **FM** is pressed in the preset tuning mode, the unit enters the manual tuning mode.
- To interrupt and cancel presetting, press **PRESET/MANUAL**. The unit will return to the manual tuning mode.
- When about 60 seconds elapse with no operation while the preset number is flashing, the unit will return to the previous indication.

Tuning in a preset station

- 1 Press **POWER** to turn on the radio.
- 2 Press **PRESET/MANUAL** if the unit is in the manual tuning mode to enter the preset tuning mode, as necessary.
- 3 Turn the **TUNING/TIME ADJ** control to display the preset number to which the desired station is assigned.
- 4 Turn the **VOL** control to adjust the volume.

Deleting a preset station

- 1 Press **POWER** to turn on the radio.
- 2 Press **PRESET/MANUAL** if the unit is in the manual tuning mode to enter the preset tuning mode, as necessary.
- 3 Turn the **TUNING/TIME ADJ** control to display the preset number to which the station you wish to delete is assigned.
- 4 Depress **ENTER/CLOCK** for more than three seconds.
After **ENTER/CLOCK** is depressed for about one second, a beep sounds and the preset number starts flashing. Release **ENTER/CLOCK** when you hear another beep and the frequency display changes to a flashing "dEL".



- 5 Press **ENTER/CLOCK** until a long beep sounds.

- If about 60 seconds elapse with no operation while the preset number and "dEL" are flashing, the unit will return to the previous mode.
- A preset number that has been deleted can be assigned a new station for preset tuning. Refer to "Presetting stations" for more details.
- If all preset numbers 0 to 19 have been deleted and you attempt to enter the preset tuning mode, "----" appears in the frequency display, and "PRESET" flashes for about three seconds. The unit then returns to the manual tuning mode.

Changing the MW Channel Step

This radio's frequency channel step in the MW band is set at 9 kHz when it is shipped from the factory. Since the broadcasting channel step in North and South America is 10 kHz, however, the channel step should be changed when listening in countries in these regions.

Area	Channel step
North/South America	10 kHz
Other countries	9 kHz

To change the channel step



- 1 Press **POWER**.
- 2 Press **LW/MW** to receive LW/MW broadcasting.
- 3 Press **LW/MW** until a double-beep sounds.
The tuning step indication "10 kHz" or "9 kHz" appears, and the display returns to the former frequency indication.




Improving reception

For FM reception

Gently pull out the telescopic antenna and adjust the length, angle and direction to obtain optimum reception.

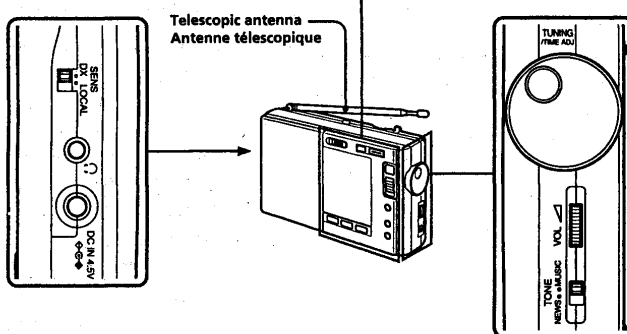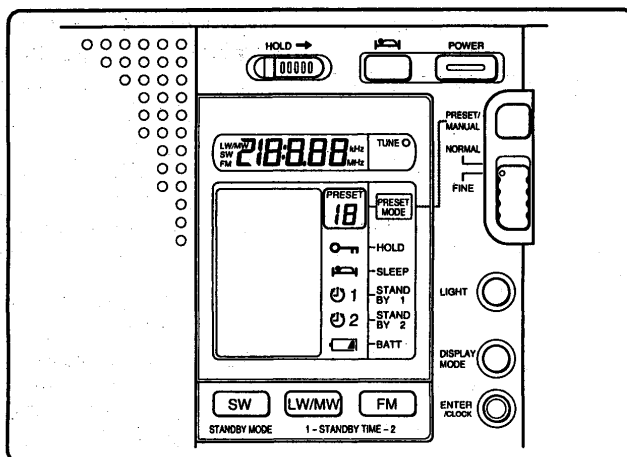

A

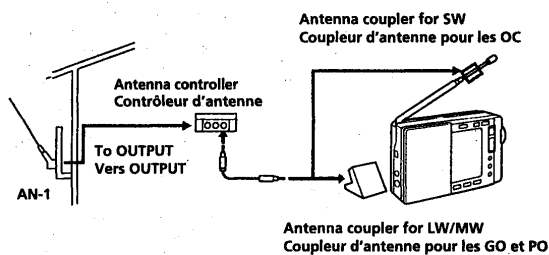

For LW/MW reception

Retract the telescopic antenna and rotate the unit to reorient the built-in ferrite bar antenna to obtain optimum reception.

For SW reception

Gently pull out the telescopic antenna to its full length and set it vertically to obtain optimum reception.

Using an external antenna for SW and LW/MW reception (see Fig. A)

Use a wide-range antenna AN-1 or AN-102 (not supplied).


- 1 Use the connecting cord to connect the antenna controller **OUTPUT** jack to the antenna coupler **INPUT** jack.
- 2 For SW reception, attach the antenna coupler to the telescopic antenna. For LW/MW reception, position the antenna coupler near the unit, where LW/MW reception is optimal.

- Keep the unit and antenna away from fluorescent lights, televisions, computers, and other equipment which may generate noise.
- Retract the telescopic antenna when using an external antenna.
- Set up the external antenna as far away from the street as possible.
- For more details on the external antenna, refer to the antenna Operating Instructions.

Setting the standby

You can turn on the radio and tune in your favorite station at the desired time with the dual standby function (Standby 1 and Standby 2). Before you set the standby, assign the station to which you wish to listen at the desired time for Standby 1 to preset number 1. Similarly, assign the station to which you wish to listen at another desired time for Standby 2 to preset number 2. Refer to "Presetting stations" for more details.

- 1 If the radio is operating, press **DISPLAY MODE** to display the clock.
- 2 Press **LW/MW•STANDBY TIME 1** for Standby 1 and **FM•STANDBY TIME 2** for Standby 2 for more than one second until you hear a beep. In this display mode, the hour and "01" (or "02") start flashing.

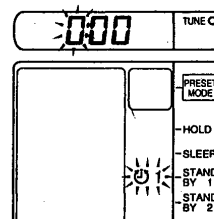

- 3 Turn the **TUNING/TIME ADJ** control until the desired hour is displayed.
- 4 Press **LW/MW•STANDBY TIME 1** (or **FM•STANDBY TIME 2**) to set the desired minute.

- 5 Turn the **TUNING/TIME ADJ** control until the desired minute is displayed.
- 6 Press **LW/MW•STANDBY TIME 1** (or **FM•STANDBY TIME 2**)
The minute stops flashing, and a few seconds later, "01" (or "02") stops flashing and remains in the display while the unit returns to the clock display.

To set/cancel standby mode or confirm the standby time

Each time **STANDBY MODE** is pressed, the display changes in the following order.

01* → 02* → 01 02 → (None)

- * The display will be flashing initially. Only while the display is flashing, the preset standby time will be displayed to allow checking of the standby time for Standby 1 or Standby 2.

- When the standby time arrives and standby is activated, the radio turns on. The unit will then turn off automatically after 60 minutes. To turn off the radio before 60 minutes have elapsed, press **POWER**.
- When you have set Standby 1 and Standby 2, and a second preset standby time arrives while the first standby function is operating, the most recent standby function will have priority over the other and tune in the appropriate station.
- When identical standby times are set for Standby 1 and Standby 2, only Standby 1 is operational.
- To cancel the standby function temporarily, slide **HOLD** to the right to display "0-m" while the radio is turned off. When the hold function is canceled and "0-m" disappears, the standby function is operational.

Activating the buzzer

To activate the buzzer instead of the radio at the desired time, delete the station assigned to either preset number 1 or preset number 2 as necessary. Refer to "Deleting a preset station" for further details.


To stop the buzzer, press any button. The buzzer will sound continuously for about 60 minutes if no button is pressed.

- The buzzer volume is not adjustable.

Setting the sleep timer

You can turn off the radio automatically after a specified number of minutes (60, 30, or 15 minutes) with the sleep timer.

- 1 Press **SLEEP**.
The radio turns on and the duration of "60" minutes and **SLEEP** flash.

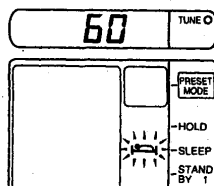

- 2 Press **SLEEP** repeatedly to select the desired duration for the sleep timer.

60 (minutes) → 30 → 15

After about three seconds, the unit returns to the frequency display.
The sleep timer is operational.


- To reset or extend the duration, press **SLEEP** and select the desired duration as shown in step 2.
- To turn off the radio before the selected duration elapses, press **POWER**.

Using other functions

Hold function

When the hold function is used, neither the buttons nor the **TUNING/TIME ADJ** control are operational. Use the hold function to prevent accidental operation. The hold function can also be used to cancel the standby function temporarily.

- 1 Slide **HOLD** in the direction of the arrow.
"0-m" appears on the display and all buttons and the **TUNING/TIME ADJ** control cease to be operational.

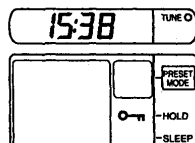

- To cancel the hold function, slide **HOLD** to the left.

To cancel the standby function temporarily

Slide **HOLD** to the right to display "0-m" while the radio is turned off. When the hold function is canceled and "0-m" disappears, the standby function is operational.

- When the hold function is used, the display is not illuminated.

Light function

Press **LIGHT** to turn on the light for about 15 seconds to view the display in the dark.

- If any function on the unit is performed during the light on, the light continues to turn on for longer than 15 seconds.

Setting the Clock

Set the time after you first install the batteries at which time "0:00" flashes.

- The clock is displayed in 24-hour indication. (Midnight: 0:00; noon: 12:00)
- See the map on the back of the radio for the names of representative cities throughout the world and the time differences separating them.

- 1 Press and hold **ENTER/CLOCK** for more than one second until you hear a beep and the hour starts flashing.



- 2 Turn the **TUNING/TIME ADJ** control until the correct hour is displayed.



- 3 Press **ENTER/CLOCK** again to set the minute.
A beep sounds and the minute starts flashing.



- 4 Turn the **TUNING/TIME ADJ** control until the correct minute is displayed.



- 5 Press **ENTER/CLOCK**.
A double-beep sounds and the minute stops flashing. The colon ":" starts flashing and the clock operates.



- When listening to the radio, press **DISPLAY MODE** to display the clock and set the time.
- To set the clock accurately, press **ENTER/CLOCK** as instructed in step 5 at the time of the tone.
- If about 60 seconds elapse with no operation, the clock setting will be aborted and the unit will return to the previous mode. In this case, repeat the procedure from step 1 to complete the clock setting.

To cancel the clock setting

Press **DISPLAY MODE**. The unit will return to the previous mode.


To display the clock

Press **DISPLAY MODE** while the radio is operating. The clock is displayed for about 1 minute. Pressing the button again returns the display to the frequency indication.


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. CABINET (REAR) REMOVAL

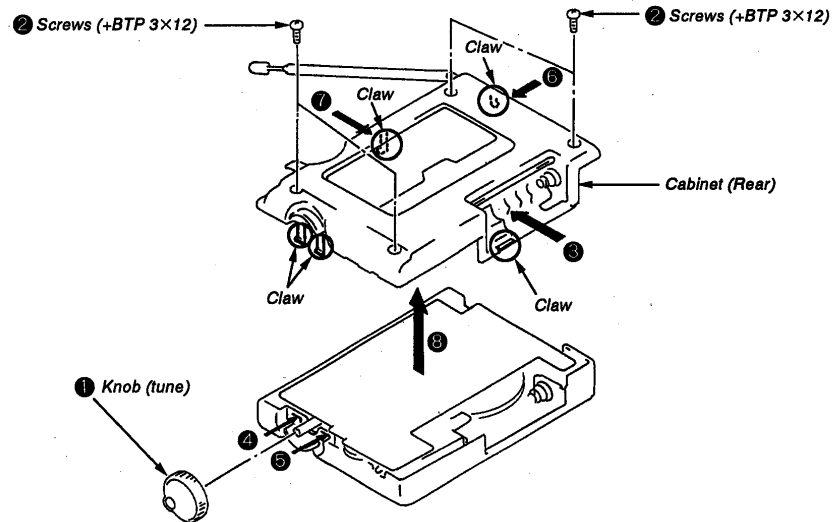


2-2. KEY BOARD AND MAIN BOARD REMOVAL

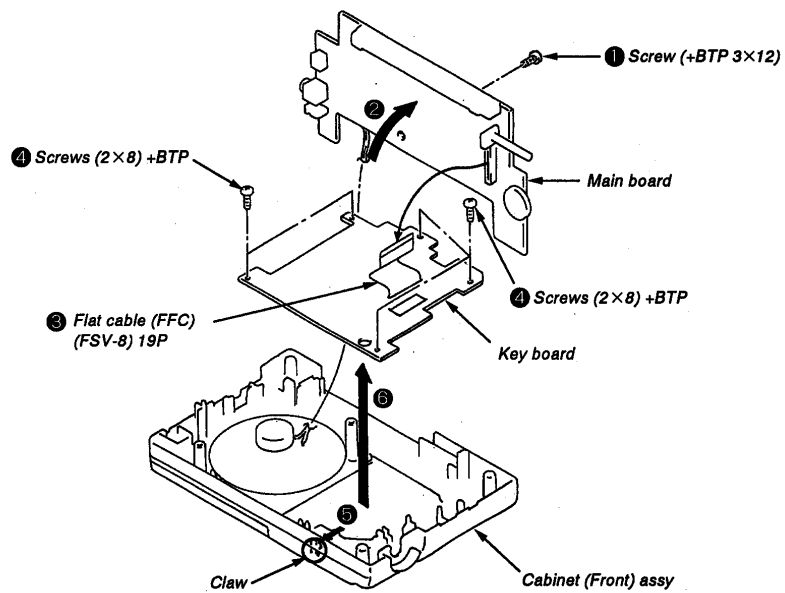


SECTION 3 ELECTRICAL ADJUSTMENTS

AM SECTION

LW :

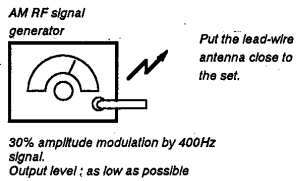

SW :

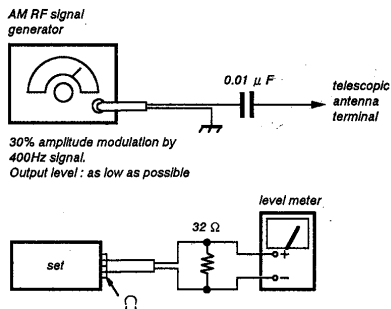


VCO Voltage Adjustment

Setting :

VOLUME : maximum
BAND : LW/SW
SENS : DX
TONE : MUSIC

[MAIN BOARD] (Conductor Side)

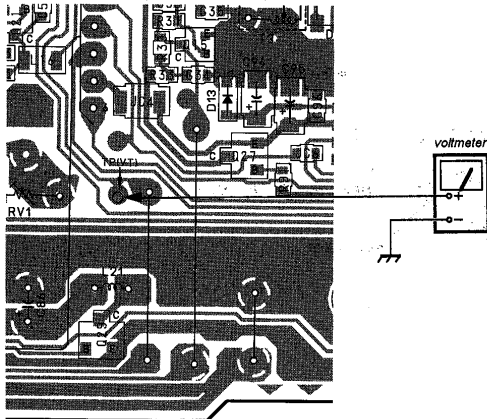

Procedure :


1. Tune the set to LW 150kHz.
2. Adjust T3 to obtain a 1.1 – 1.3V on the voltmeter.
3. Tune the set to SW 261,000kHz.
4. Confirm that the voltage reading on the voltmeter is 7.0 – 9.0V.

AM IF Adjustment

Setting :

VOLUME : maximum
BAND : SW


[MAIN BOARD] (Conductor Side)

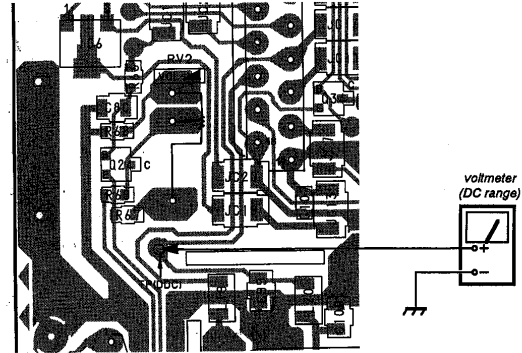

Procedure :

1. Set the frequencies of the AM RF SG and the frequency display of the set to SW 3,850kHz.
2. Confirm that the voltage reading on the voltmeter is 11.5 – 14.5V.
3. Adjust T1 and T4 maximum output level.

FM SECTION

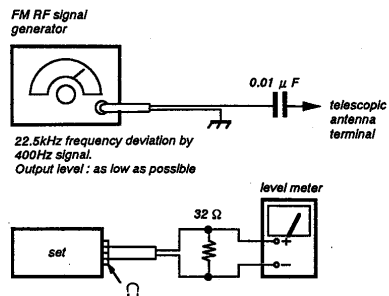

- Repeat the procedures in each adjustment several times, and the tracking adjustments should be finally done by the trimmer capacitors.

VCO Voltage Check

Note : 1) This adjustment should be performed after the AM VCO voltage adjustment.
2) Test point is identical the AM VCO voltage adjustment.

Setting :

VOLUME : maximum
BAND : FM

Procedure :

- Tune the set to 76.0MHz.
- Confirm that the voltage reading on the voltmeter is 2.0 – 4.0V.
- Tune the set to FM 108.0MHz.
- Confirm that the voltage reading on the voltmeter is 8.7 – 10.7V.

FM Tracking adjustment

Setting :

VOLUME : maximum
BAND : FM



Procedure :

- Set the frequencies of the FM RF SG and the frequency display of the set to 76.0MHz.
- Adjust L13 to obtain a maximum reading on the level meter.
- Set the frequencies of the FM RF SG and the frequency display of the set to 108.0MHz.
- Adjust CT1 to obtain a maximum reading on the level meter.
- Repeat the above steps several times.

FM VCO Adjustment

Setting :

VOLUME : maximum
BAND : FM

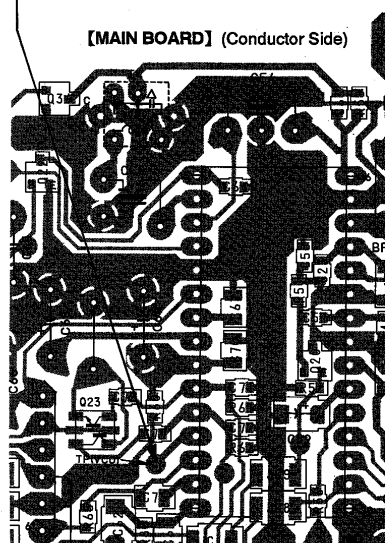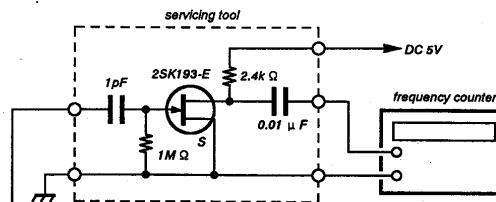


Procedure :

- Insert the HEADPHONES into PHONES jack.
- Connect a capacitor (10 μ F) between pin 21 of IC3 and Ground.
- Tune the set to FM 98MHz.
- Adjust RV1 to obtain 75.8 – 76.2kHz on the frequency counter.

Adjustment Location :

[MAIN BOARD] (Conductor Side)

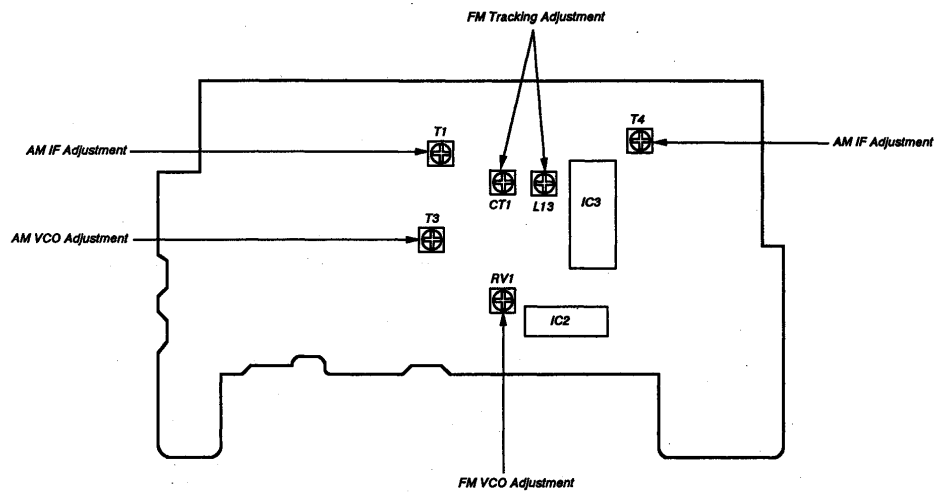

SECTION 4 EXPLANATION OF IC TERMINALS

IC201 μ PD17072GB-527-1A7 (SYSTEM CONTROL, LCD DRIVE)

Pin No.	Pin name	I/O	Description
1	KS1	O	Timing signal output for key matrix.
2	BAR/ROD	O	Antenna select switch. ("H" : Ferrite-Rod "L" : Telescope)
3	BAND (FM/AM)	O	Band select switch. ("H" : AM, "L" : FM)
4	H/L	O	Frequency select switch. ("H" : HI, "L" : Low)
5	MUTE	O	Mute signal output. ("L" : MUTE)
6	PWER AUDIO	O	Audio power ON. ("H" : Audio ON)
7	POWER TUNER	O	Tuner power ON. ("H" : Tuner ON)
8	KS2	O	Timing signal output for key matrix.
9	KS3	O	Timing signal output for key matrix.
10	KR1	I	Key return input.
11	KR2	I	Key return input.
12	KR3	I	Key return input.
13	SIMUKE	I	Destination select signal input.
14	10.25M	O	Destination select signal output. ("H" : output)
15	EMCODER-DATA	I	Rotary encoder data input B.
16	SEG CONT B	O	Segment select output A. ("H" : OFF)
17	SEG CONT A	O	Segment select output B. ("H" : OFF)
18	GND	—	Ground.
19	EO	O	PLL signal output.
20	VCOL (LW/MW/SW)	I	AM VCO input.
21	VCOH (FM)	I	FM VCO input.
22	VDD2	O	Connected to the regulator circuit capacitor. (PLL)
23	VDD1 (2V IN)	—	Power supply 2V.
24	XO	O	Connected to the liquid crystal oscillator.
25	XI	I	Oscillator 75kHz liquid crystals.
26	VDD5	O	Connected to the regulator circuit capacitor. (oscillator)
27	VDD3	—	Power supply for liquid crystal display drive.
28	CAP1	—	Power supply for liquid crystal display drive.
29	CAP2	—	Power supply for liquid crystal display drive.
30	VDD4	—	Power supply for liquid crystal display drive.
31	COM0	O	Liquid crystal display common signal output.
32	COM1	O	Liquid crystal display common signal output.
33	COM2	O	Liquid crystal display common signal output.
34	COM3	O	Liquid crystal display common signal output.
35	LCD0	O	Liquid crystal display segment signal output.

Pin No.	Pin name	I/O	Description
36	LCD1	O	Liquid crystal display segment signal output.
37	LCD2	O	Liquid crystal display segment signal output.
38	LCD3	O	Liquid crystal display segment signal output.
39	LCD4	O	Liquid crystal display segment signal output.
40	LCD5	O	Liquid crystal display segment signal output.
41	LCD6	O	Liquid crystal display segment signal output.
42	LCD7	O	Liquid crystal display segment signal output.
43	LCD8	O	Liquid crystal display segment signal output.
44	LCD9	O	Liquid crystal display segment signal output.
45	LCD10	O	Liquid crystal display segment signal output.
46	LCD11	O	Liquid crystal display segment signal output.
47	LCD12	O	Liquid crystal display segment signal output.
48	LCD13	O	Liquid crystal display segment signal output.
49	LCD14	O	Liquid crystal display segment signal output.
50	CE	I	Reset signal input. ("L" : Reset)
51	ENCODER-CLOCK	I	Rotary encoder data input A.
52	BEEP	O	Beep signal output.
53	VDET	I	Voltage detect.
54	LIGHT	O	Light signal output. ("H" : ON)
55	HOLD	I	Hold switch signal input. ("H" : Unhold, "L" : Hold)
56	DIAL STEP	I	Dial speed select switch input. ("H" : Fast, "L" : Slow)

SECTION 5 DIAGRAMS

5-1. PRINTED WIRING BOARDS

● SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location
D1	D-23	Q8	D-20
D2	C-21	Q10	F-19
D3	C-19	Q11	D-21
D4	C-19	Q12	E-19
D5	C-18	Q13	E-19
D6	D-18	Q14	D-19
D7	D-18	Q15	E-17
D8	E-18	Q16	E-17
D9	D-12	Q17	D-18
D10	E-17	Q18	D-17
D11	D-17	Q19	D-17
D12	D-16	Q20	D-15
D13	E-18	Q21	E-16
D14	H-13	Q22	C-13
D15	G-13	Q23	E-14
D16	H-23	Q24	F-12
D17	G-22	Q25	E-23
D18	G-20	Q26	E-19
D201	G-4	Q27	F-18
D202	H-4	Q28	G-20
D203	B-8	Q29	G-17
D204	C-5	Q30	G-20
		Q31	H-13
		Q32	H-13
IC1	F-18	Q33	G-20
IC2	F-15		
IC3	D-15	Q34	F-13
IC4	D-12	Q35	E-19
IC5	E-12	Q36	C-13
		Q201	G-6
IC6	E-11	Q202	F-6
IC201	E-7		
IC202	D-7	Q203	F-6
IC203	C-7	Q204	D-4
IC204	G-4	Q205	G-7
		Q206	G-8
		Q207	C-8
Q2	C-20		
Q3	C-18	Q208	F-8
Q4	C-16		
Q5	E-20		
Q6	E-20		

Note:


- ○ — : parts extracted from the component side.
- — : parts extracted from the conductor side.
- △ : internal component.
- ▨ : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated)


Caution :

Pattern face side : Parts on the pattern face side seen from
(Conductor Side) the pattern face are indicated.
Parts face side : Parts on the parts face side seen from the
(Component side) parts face are indicated.

- **Abbreviation**


IT : Italian
EA : Saudi Arabia
JE : Tourist

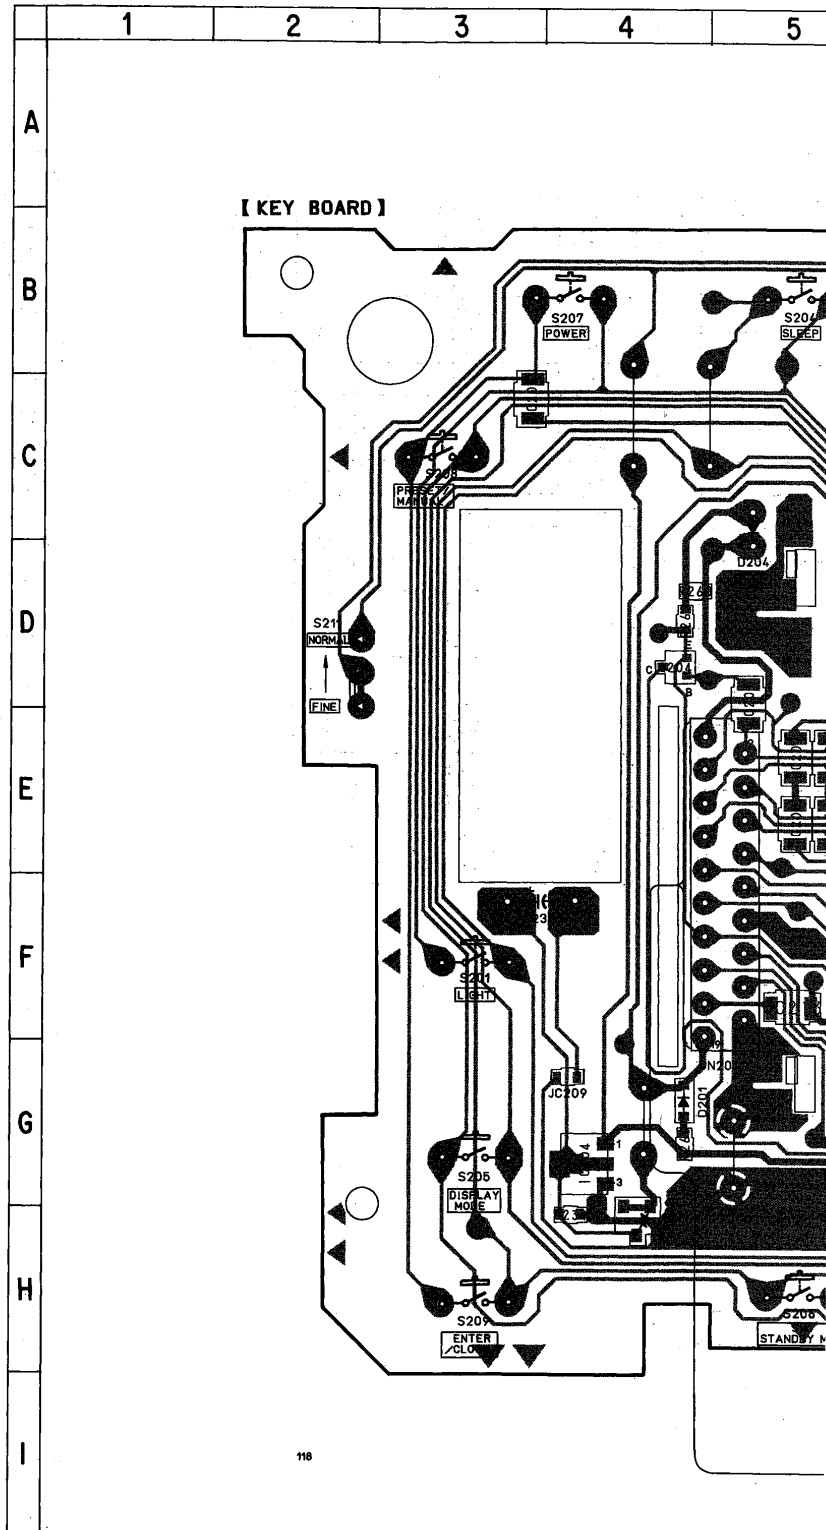

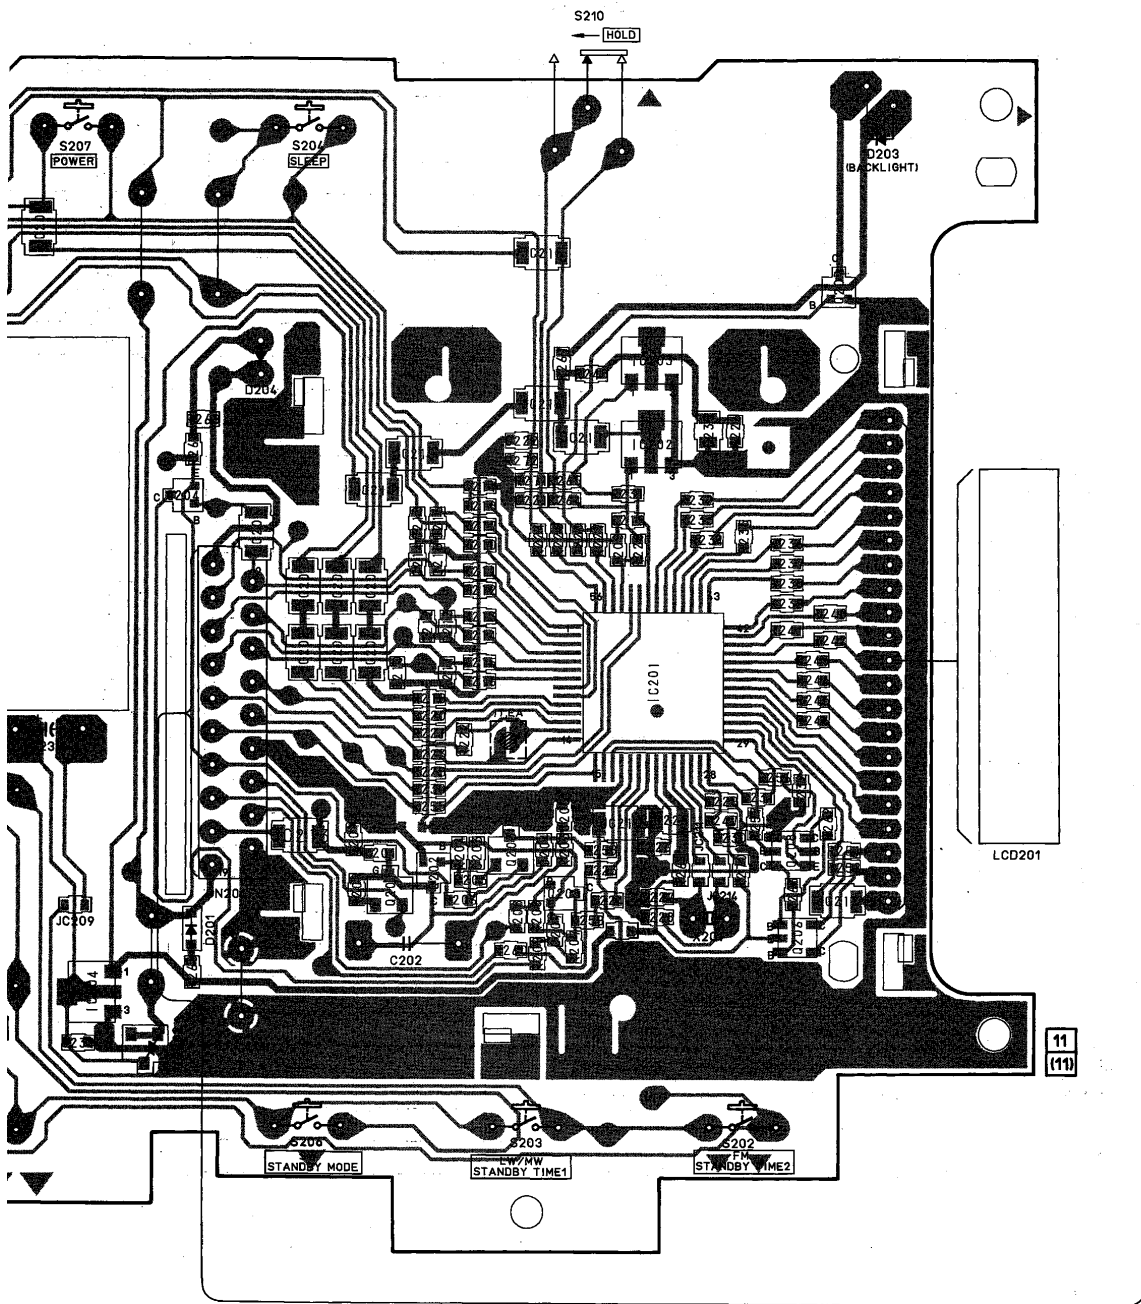


10	11	12	13	14	15	16	17
----	----	----	----	----	----	----	----

【 MAIN BOARD 】

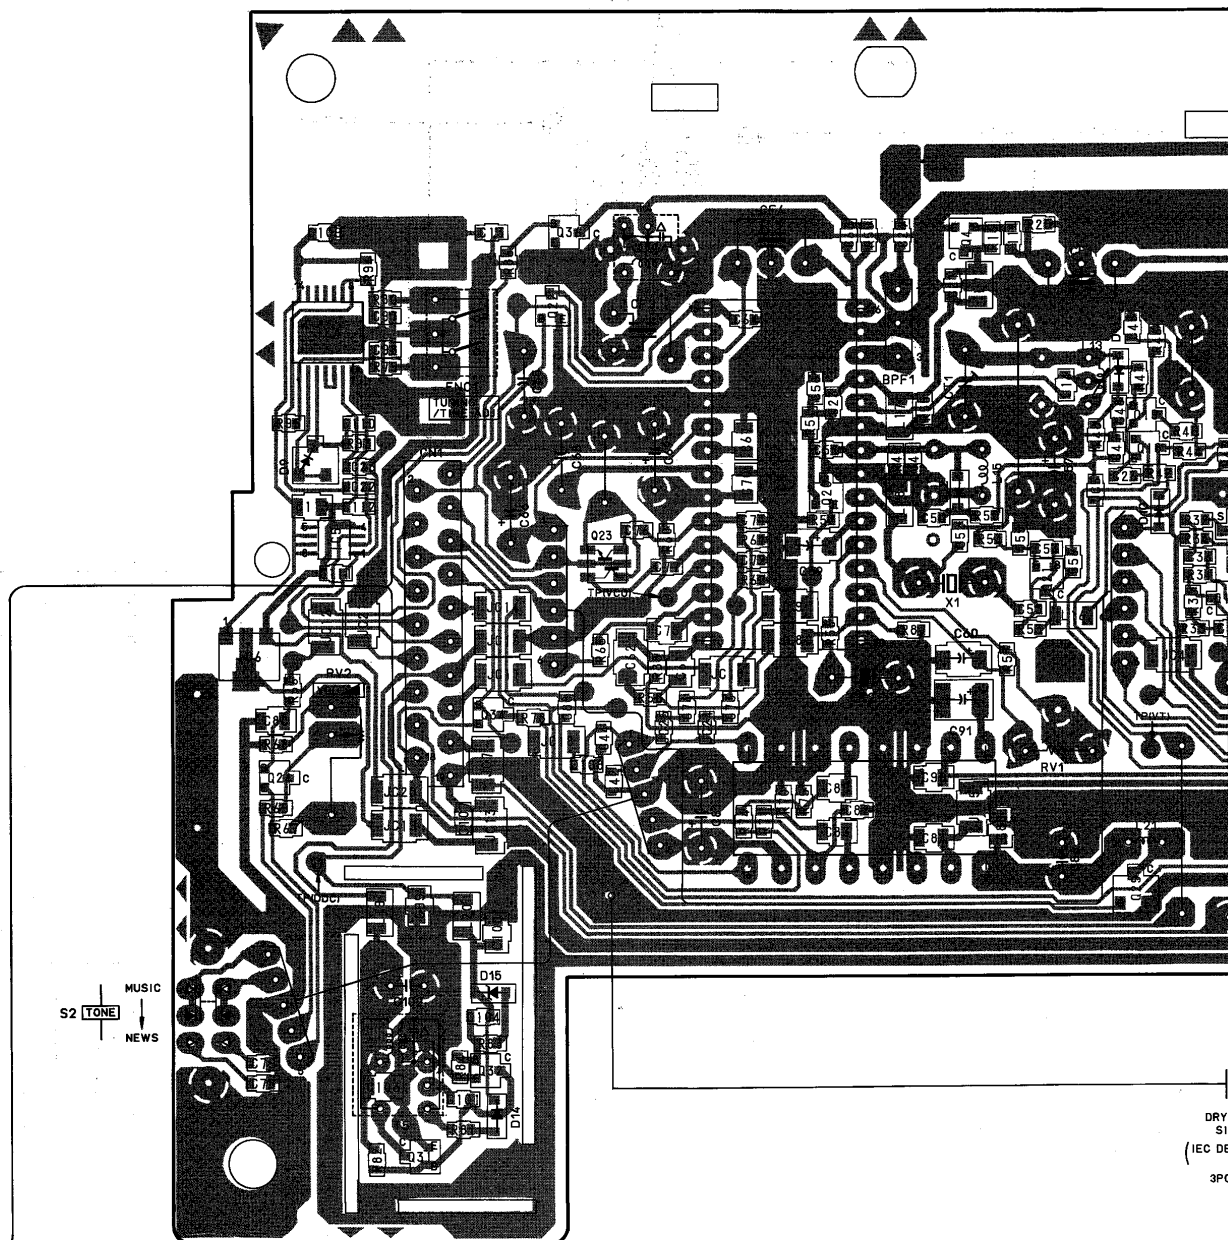

7	18	19	20	21	22	23	24
---	----	----	----	----	----	----	----

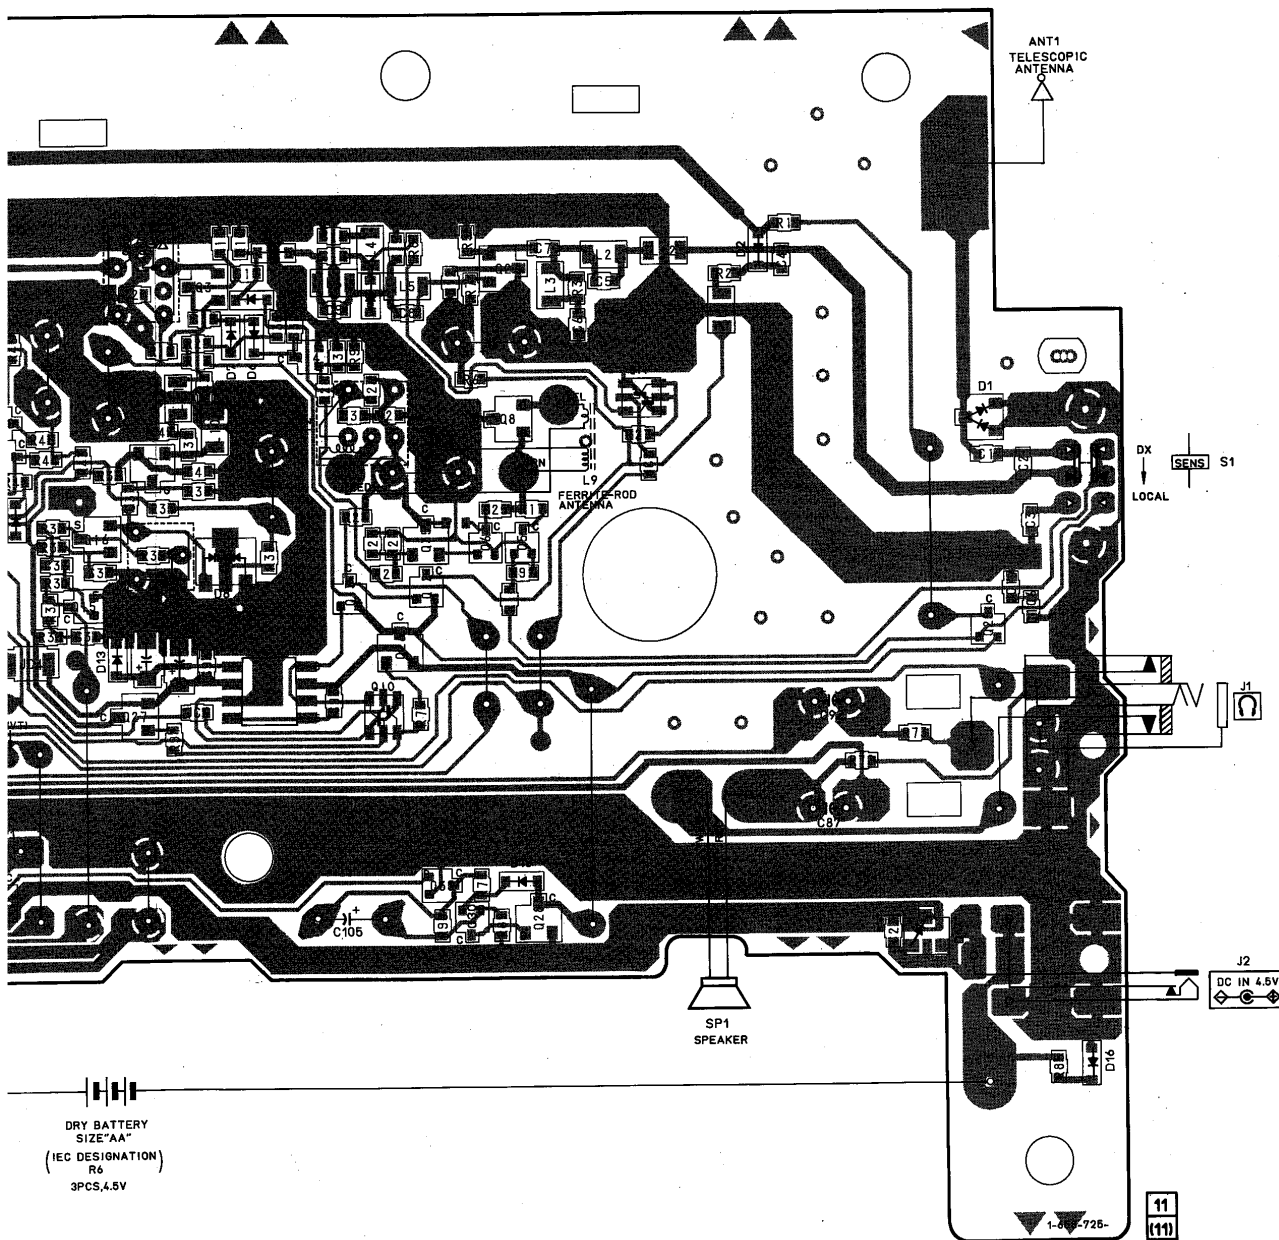

MAIN

Ref. No.	Part No.	Description	Remark
C92	1-124-589-11	ELECT	47uF 20% 16V
C93	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C94	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C95	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C96	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C97	1-162-957-11	CERAMIC CHIP	220PF 5% 50V
C98	1-162-957-11	CERAMIC CHIP	220PF 5% 50V
C99	1-164-346-11	CERAMIC CHIP	1uF 16V
C100	1-164-346-11	CERAMIC CHIP	1uF 16V
C101	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C102	1-124-589-11	ELECT	47uF 20% 16V
C103	1-164-346-11	CERAMIC CHIP	1uF 16V
C104	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C105	1-126-153-11	ELECT	22uF 20% 6.3V
C106	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C107	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C108	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C109	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C110	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C111	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C112	1-164-156-11	CERAMIC CHIP	0.1uF 25V
C113	1-164-346-11	CERAMIC CHIP	1uF 16V
C114	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
< FILTER >			
CF1	1-577-601-11	FILTER, CERAMIC	
CF2	1-760-238-71	FILTER, CERAMIC	
CF3	1-577-687-11	FILTER, CERAMIC	
CF4	1-760-238-71	FILTER, CERAMIC	
< CONNECTOR >			
CN1	1-691-051-21	HOUSING, CONNECTOR 19P	
< TRIMMER >			
CT1	1-141-304-21	CAP, TRIMMER 10PF	
< DIODE >			
D1	8-719-800-76	DIODE 1SS226	
D2	8-719-421-40	DIODE MA77	
D3	8-719-421-40	DIODE MA77	
D4	8-719-421-40	DIODE MA77	
D5	8-719-421-40	DIODE MA77	
D6	8-719-421-40	DIODE MA77	
D7	8-719-421-40	DIODE MA77	
D8	8-719-945-31	DIODE SVC341-L	
D9	8-719-941-04	DIODE SB007-03CP	
D10	8-719-988-62	DIODE 1SS355	
D11	8-719-002-81	DIODE 1T363	
D12	8-719-002-81	DIODE 1T363	
D13	8-719-988-62	DIODE 1SS355	
D14	8-719-988-62	DIODE 1SS355	
D15	8-719-977-39	DIODE DTZ13A	

Ref. No.	Part No.	Description	Remark
D16	8-719-988-62	DIODE 1SS355	
D17	8-719-975-40	DIODE RB411D	
D18	8-719-988-62	DIODE 1SS355	
< ROTARY ENCODER >			
ENC1	1-473-596-11	ENCODER, ROTARY (TUNING/TIME ADJ)	
< IC >			
IC1	8-759-804-76	IC LA5002M	
IC2	8-752-059-51	IC CXA1522P	
IC3	8-752-050-20	IC CXA1238S	
IC4	8-759-079-56	IC TC74VHC14FS(EL)	
IC5	8-759-083-94	IC TC7W74FU	
IC6	8-759-255-04	IC S-81220PG-PS-T1	
< JACK >			
J1	1-566-891-11	JACK (□)	
J2	1-580-681-21	JACK,DC(POLARITY UNIFIED TYPE)(DC IN 4.5V)	
< JUMPER RESISTOR >			
JC2	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC4	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC5	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC6	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC7	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC8	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC9	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC10	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC11	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC12	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC13	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC14	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC15	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC16	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC17	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC18	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC19	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC20	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC21	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC22	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC23	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC24	1-216-864-11	METAL CHIP 0 5% 1/16W	
JC25	1-216-864-11	METAL CHIP 0 5% 1/16W	
< COIL >			
L1	1-412-939-11	INDUCTOR 1uH	
L2	1-412-938-11	INDUCTOR 0.82uH	
L3	1-412-961-11	INDUCTOR 68uH	
L4	1-412-939-11	INDUCTOR 1uH	
L5	1-412-945-11	INDUCTOR 3.3uH	
L6	1-412-947-11	INDUCTOR 4.7uH	

Ref. No.	Part No.	Description	Remark
L7	1-412-947-11	INDUCTOR 4.7uH	
L9	1-501-793-21	ANTENNA, FERRITE-ROD (LW/MW)	
L10	1-412-951-11	INDUCTOR 10uH	
L11	1-412-939-11	INDUCTOR 1uH	
L12	1-412-947-11	INDUCTOR 4.7uH	
L13	1-402-815-11	COIL (WITH CORE) (FM RF)	
L14	1-412-965-11	INDUCTOR 68nH	
L15	1-406-786-11	COIL, FM (OSC)	
L16	1-412-963-11	INDUCTOR 100uH	
L17	1-412-939-11	INDUCTOR 1uH	
L18	1-412-951-11	INDUCTOR 10uH	
L19	1-412-963-11	INDUCTOR 100uH	
L20	1-412-963-11	INDUCTOR 100uH	
L21	1-410-294-11	INDUCTOR, MICRO 38uH	
< TRANSISTOR >			
Q2	8-729-123-86	TRANSISTOR 2SK238-K16	
Q3	8-729-116-64	TRANSISTOR 2SK508-K51	
Q4	8-729-423-52	TRANSISTOR 2SC3931-C	
Q5	8-729-423-52	TRANSISTOR 2SC3931-C	
Q6	8-729-423-52	TRANSISTOR 2SC3931-C	
Q8	8-729-123-86	TRANSISTOR 2SK238-K16	
Q10	8-729-403-24	TRANSISTOR XN4210	
Q11	8-729-403-24	TRANSISTOR XN4210	
Q12	8-729-028-92	TRANSISTOR DTA144TUA-T106	
Q13	8-729-028-92	TRANSISTOR DTA144TUA-T106	
Q14	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q15	8-729-423-52	TRANSISTOR 2SC3931-C	
Q16	8-729-208-47	TRANSISTOR 2SK210-GR	
Q17	8-729-220-93	TRANSISTOR 2SK209-G	
Q18	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q19	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q20	8-729-423-52	TRANSISTOR 2SC3931-C	
Q21	8-729-423-52	TRANSISTOR 2SC3931-C	
Q22	8-729-029-15	TRANSISTOR DTC144TUA-T106	
Q23	8-729-403-24	TRANSISTOR XN4210	
Q24	8-729-028-92	TRANSISTOR DTA144TUA-T106	
Q25	8-729-028-92	TRANSISTOR DTA144TUA-T106	
Q26	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q27	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q28	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q29	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q30	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q31	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q32	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q33	8-729-029-15	TRANSISTOR DTC144TUA-T106	
Q34	8-729-029-15	TRANSISTOR DTC144TUA-T106	
Q35	8-729-921-72	TRANSISTOR 2SD1781K-R	
Q36	8-729-423-52	TRANSISTOR 2SC3931-C	
< RESISTOR >			
R1	1-216-821-11	METAL CHIP 1K 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R2	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R3	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R5	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R6	1-216-797-11	METAL CHIP 10 5% 1/16W	
R7	1-216-817-11	METAL CHIP 470 5% 1/16W	
R8	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R9	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R10	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R11	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R12	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R13	1-216-809-11	METAL CHIP 100 5% 1/16W	
R16	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R17	1-216-817-11	METAL CHIP 470 5% 1/16W	
R18	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R20	1-216-819-11	METAL CHIP 680 5% 1/16W	
R21	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R24	1-216-805-11	METAL CHIP 47 5% 1/16W	
R25	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R26	1-216-817-11	METAL CHIP 470 5% 1/16W	
R27	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R28	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R29	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R30	1-216-813-11	METAL CHIP 220 5% 1/16W	
R31	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R32	1-216-805-11	METAL CHIP 47 5% 1/16W	
R33	1-216-797-11	METAL CHIP 10 5% 1/16W	
R34	1-216-797-11	METAL CHIP 10 5% 1/16W	
R35	1-216-801-11	METAL CHIP 22 5% 1/16W	
R36	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R37	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R38	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R39	1-216-809-11	METAL CHIP 100 5% 1/16W	
R42	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R43	1-216-797-11	METAL CHIP 10 5% 1/16W	
R44	1-216-835-11	METAL CHIP 15K 5% 1/16W	
R45	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R46	1-216-817-11	METAL CHIP 470 5% 1/16W	
R47	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R48	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R49	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R50	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R51	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R52	1-216-817-11	METAL CHIP 470 5% 1/16W	
R53	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R54	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R55	1-216-819-11	METAL CHIP 680 5% 1/16W	
R56	1-216-813-11	METAL CHIP 220 5% 1/16W	
R57	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R58	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R59	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R60	1-216-797-11	METAL CHIP 10 5% 1/16W	

ICF-SW40

MAIN

Ref. No.	Part No.	Description		Remark
R61	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R62	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R65	1-216-841-11	METAL CHIP	47K	5% 1/16W
R66	1-216-833-11	METAL CHIP	10K	5% 1/16W
R67	1-216-825-11	METAL CHIP	2.2K	5% 1/16W
R68	1-216-825-11	METAL CHIP	2.2K	5% 1/16W
R69	1-216-821-11	METAL CHIP	1K	5% 1/16W
R70	1-216-805-11	METAL CHIP	47	5% 1/16W
R71	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R72	1-216-809-11	METAL CHIP	100	5% 1/16W
R73	1-216-809-11	METAL CHIP	100	5% 1/16W
R74	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R75	1-216-805-11	METAL CHIP	47	5% 1/16W
R76	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R77	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R78	1-216-825-11	METAL CHIP	2.2K	5% 1/16W
R79	1-216-849-11	METAL CHIP	220K	5% 1/16W
R80	1-216-849-11	METAL CHIP	220K	5% 1/16W
R81	1-216-821-11	METAL CHIP	1K	5% 1/16W
R82	1-216-845-11	METAL CHIP	100K	5% 1/16W
R83	1-216-845-11	METAL CHIP	100K	5% 1/16W
R84	1-216-845-11	METAL CHIP	100K	5% 1/16W
R85	1-216-809-11	METAL CHIP	100	5% 1/16W
R86	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R87	1-216-849-11	METAL CHIP	220K	5% 1/16W
R88	1-216-849-11	METAL CHIP	220K	5% 1/16W
R89	1-216-829-11	METAL CHIP	4.7K	5% 1/16W
R90	1-216-841-11	METAL CHIP	47K	5% 1/16W
R91	1-216-833-11	METAL CHIP	10K	5% 1/16W
R92	1-216-845-11	METAL CHIP	100K	5% 1/16W
R93	1-216-849-11	METAL CHIP	220K	5% 1/16W
R94	1-216-857-11	METAL CHIP	1M	5% 1/16W
R95	1-216-857-11	METAL CHIP	1M	5% 1/16W
< VARIABLE RESISTOR >				
RV1	1-241-765-11	RES, ADJ, CARBON 22K (FM VCO)		
RV2	1-223-967-11	RES, VAR, CARBON 50K (VOL)		
< SWITCH >				
S1	1-572-552-11	SWITCH, SLIDE (SENS)		
S2	1-572-552-11	SWITCH, SLIDE (TONE)		
< TRANSFORMER >				
T1	1-404-764-21	TRANSFORMER, IF		
T2	1-411-760-11	COIL (LW/MW RF)		
T3	1-411-761-11	COIL (OSC)		
T4	1-404-444-31	TRANSFORMER, IF		
T5	1-449-138-61	TRANSFORMER, DC-DC CONVERTER		
< VIBRATOR >				
X1	1-760-018-21	VIBRATOR, CRYSTAL (10.25MHz)		

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	

17	1-769-222-11	CABLE, FLAT (FFC) (FSV-8) 19P	
ANT1	1-501-222-81	ANTENNA, TELESCOPIC (FM)	
LCD201	1-801-196-11	DISPLAY PANEL, LIQUID CRYSTAL	
		(US,Canadian,AEP,E,AUS,JE)	
LCD201	1-801-196-21	DISPLAY PANEL, LIQUID CRYSTAL (IT,EA)	
SP1	1-505-246-11	SPEAKER (6.6 cm)	


		ACCESSORIES & PACKING MATERIALS	

3-810-631-01		MANUAL, INSTRUCTION (ENGLISH/JAPANESE/ KOREAN) (JE)	
3-810-631-11		MANUAL, INSTRUCTION (ENGLISH/FRENCH) (US,Canadian,AEP,E)	
3-810-631-21		MANUAL, INSTRUCTION (SPANISH/ PORTUGUESE/CHINESE) (AEP1,E)	
3-810-631-31		MANUAL, INSTRUCTION (GERMAN/DUTCH/ SWEDISH) (AEP2)	
3-810-631-41		MANUAL, INSTRUCTION (ENGLISH/ITALIAN/ ARABIC) (IT,EA)	
3-893-802-21		BOOK, GUIDE, WAVE (JE)	
3-906-140-01		CASE, CARRYING	
3-912-863-31		SHORT WAVE GUIDE (US,Canadian,AEP,E,IT,EA)	
3-934-954-01		INDIVIDUAL CARTON (JE)	
3-934-957-01		INDIVIDUAL CARTON (US,Canadian,AEP,E,IT,EA)	

9-960-640-11

Sony Corporation
Consumer A&V Products Company
Personal A&V Products Div.


English
96C0295-1
Printed in Japan
© 1996.3
Published by Home A&V Products Div.
Quality Engineering Dept.

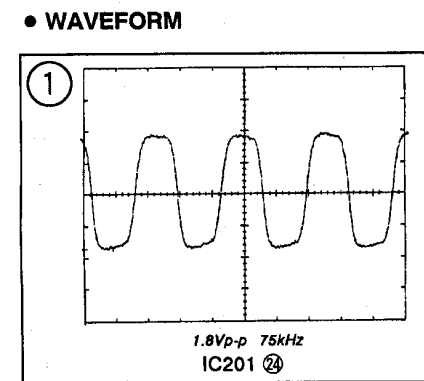


- All capacitors are in μF unless otherwise noted. μF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\%W$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- **B**  : B+ Line
-  : Panel designation.
-  : adjustment for repair.
- Power voltage is dc 4.5V and fed with regulated dc power supply from external power voltage jack.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- no mark : FM
 - () : MW/LW
 - () : SW
- Voltages are taken with a VOM (Input impedance 10M Ω).
- Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 -  : FM
 -  : MW/LW
 -  : SW
- Abbreviation
 - IT : Italian
 - EA : Saudi Arabia
 - JE : Tourist

● IC BLOCK DIAGRAMS


IC1 LA5002M

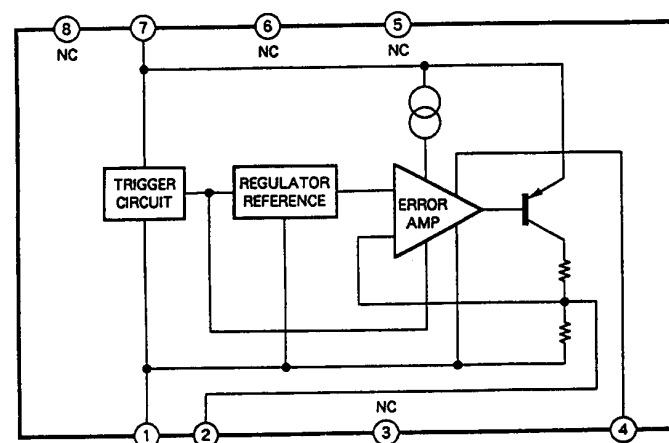


IC2 CXA1522P

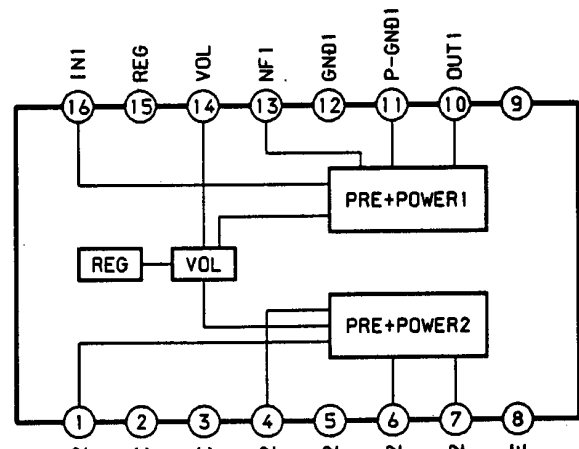

IC3 CXA1238S

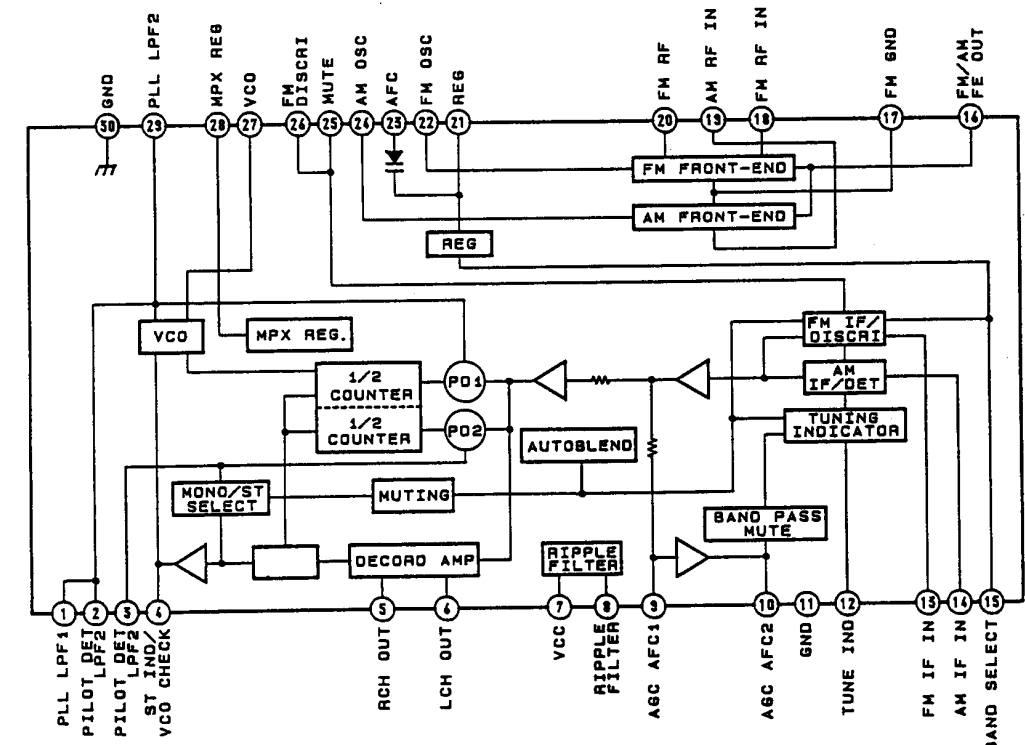

IC5 TC7W74FU

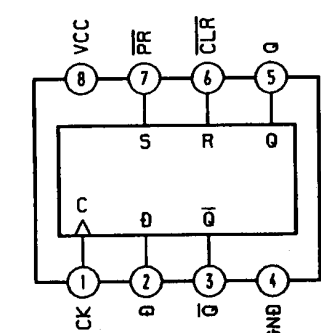


SECTION 6 EXPLODED VIEW

NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
AUS : Australian JE : Tourist
EA : Saudi Arabia IT : Italian

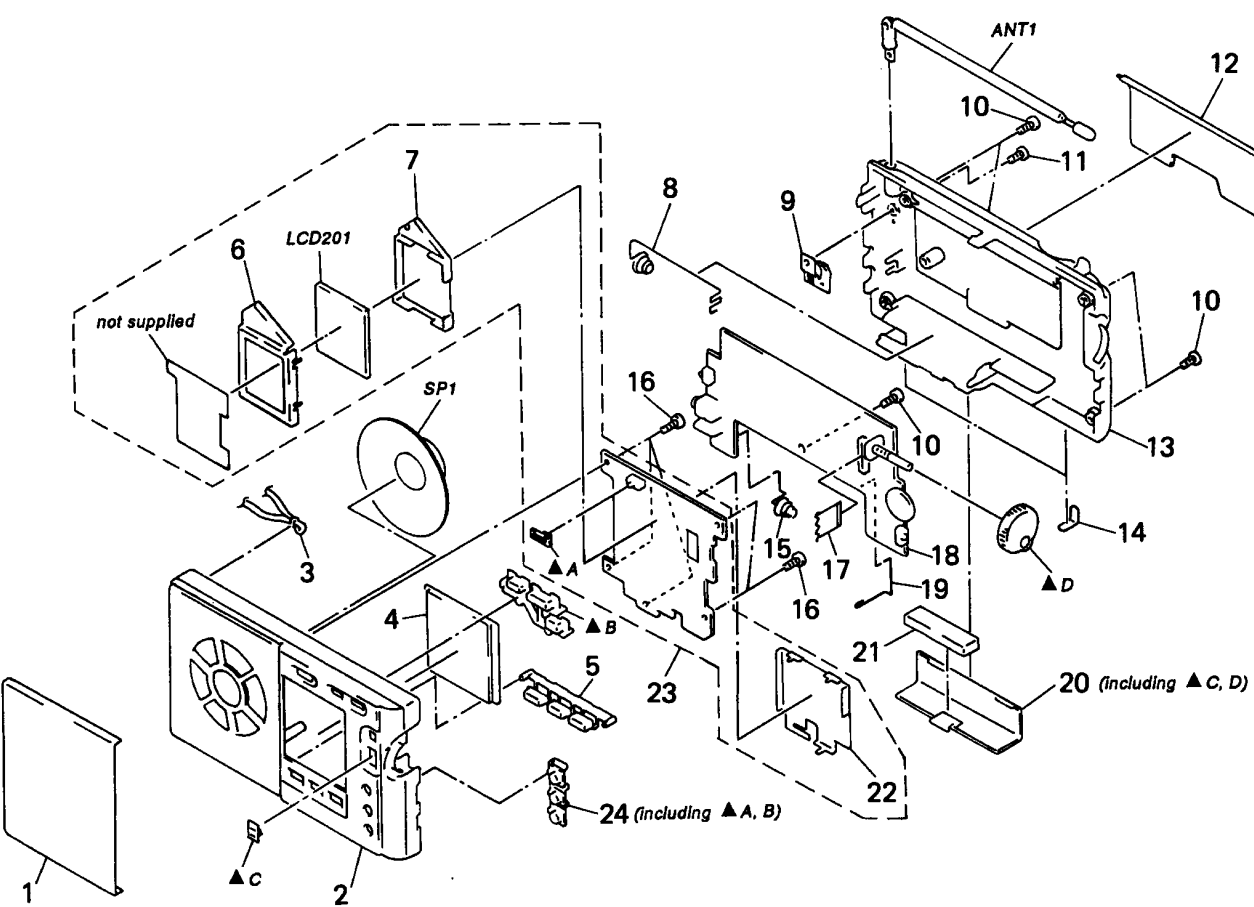

Ref. No.	Part No.	Description	Remark
1	3-934-694-01	PANEL	
2	3-934-690-01	CABINET (FRONT)	
3	3-385-660-01	STRAP, HAND	
4	3-934-693-01	PLATE, TRANSPARENT	
5	3-934-696-01	BUTTON (BAND)	
6	3-934-706-01	CASE (LCD), SHIELD	
7	3-934-701-01	PLATE, LIGHT GUIDE	
8	3-934-705-01	TERMINAL (+/-), BATTERY	
9	3-383-877-01	PLATE (ANT), CONTACT	
10	7-685-548-19	SCREW +BTP 3X12 TYPE2 N-S	
11	3-370-475-11	SCREW (NYLOCK + B 3X6)	
12	3-893-839-11	STAND	
13	3-934-691-01	CABINET (REAR)	
14	3-383-881-01	FOOT, RUBBER	
15	3-934-704-01	TERMINAL (-), BATTERY	
16	3-371-765-21	SCREW (2X8), +BTP	

Ref. No.	Part No.	Description	Remark
17	1-769-222-11	CABLE, FLAT (FFC) (FSV-8) 19P	
18	A-3679-755-A	MAIN BOARD, COMPLETE	
19	3-934-703-01	TERMINAL (+), BATTERY	
20	3-932-189-01	LID (COMBINED), BATTERY CASE	
21	3-935-886-01	CUSHION (BATTERY CASE LID)	
22	3-934-707-01	CASE (MICRO COMPUTER), SHIELD	
23	A-3679-754-A	KEY BOARD, COMPLETE (US Canadian, AEP, AUS, E, JE)	
24	A-3679-756-A	KEY BOARD, COMPLETE (IT, EA)	
25	3-932-191-01	BUTTON (COMBINED)	
26	1-501-222-81	ANTENNA, TELESCOPIC (FM)	
27	1-505-246-11	SPEAKER (6.8 cm)	
28	1-801-196-11	DISPLAY PANEL, LIQUID CRYSTAL (US, Canadian, AEP, AUS, JE)	
29	1-801-196-21	DISPLAY PANEL, LIQUID CRYSTAL (IT, EA)	

SECTION 7 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal oxide-film resistor
F: nonflammable
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Ref. No.	Part No.	Description	Remark
*	A-3679-754-A	KEY BOARD, COMPLETE (US, Canadian, AEP, AUS, JE)	
*	A-3679-756-A	KEY BOARD, COMPLETE (IT, EA)	
*	3-934-701-01	PLATE, LIGHT GUIDE	
*	3-934-706-01	CASE (LCD), SHIELD	
*	3-934-707-01	CASE (MICRO COMPUTER), SHIELD	
< CAPACITOR >			
C201	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C202	1-136-177-00	FILM 1uF 5% 50V	
C203	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C204	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C205	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C207	1-162-905-11	CERAMIC CHIP 1PF 0.25PF50V	
C208	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C209	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C210	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C211	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C212	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C213	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C214	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C215	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C216	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C217	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C218	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C219	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C220	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C221	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C222	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C223	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C224	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C225	1-164-346-11	CERAMIC CHIP 1uF 16V	
C226	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C227	1-162-925-11	CERAMIC CHIP 68PF 5% 50V	
C228	1-164-185-11	CERAMIC CHIP 13PF 5% 50V	
C229	1-164-156-11	CERAMIC CHIP 0.1uF 25V	

SEMICONDUCTORS

- In each case, u: μ , for example:
uA.....: μ A....., uPA.....: μ PA.....
uPB.....: μ PB....., uPC.....: μ PC.....
uPD.....: μ PD.....
- CAPACITORS
uF: μ F
uH: μ H
- COILS
uH: μ H
- Abbreviation
AUS : Australian JE : Tourist
EA : Saudi Arabia IT : Italian
AEP1 : Countries except for German, Austrian, Scandinavian countries.
AEP2 : German, Austrian, Scandinavian countries.

Ref. No.	Part No.	Description	Remark
C230	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C231	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C232	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C233	1-126-166-11	ELECT 2200uF 5.5V	
C234	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C235	1-164-346-11	CERAMIC CHIP 1uF 16V	
< CONNECTOR >			
CN201	1-691-650-11	SOCKET, CONNECTOR 19P	
< DIODE >			
D201	8-719-988-62	DIODE 1SS355	
D202	8-719-941-04	DIODE S8007-03CP	
D203	8-719-980-90	LED SLP381F-51-AB (BACKLIGHT)	
D204	8-719-915-36	LED SLP1458 (TUNE)	
< IC >			
IC201	8-759-394-40	IC uPD17072GB-527-1A7	
IC202	8-759-067-57	IC S-80732AN-DW-S	
IC203	8-759-503-28	IC S-80727AN-DQ-S	
IC204	8-759-255-04	IC S-81220PG-PS-T1	
< JUMPER RESISTOR >			
JC201	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC202	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC203	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC204	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC205	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC206	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC207	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC208	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC209	1-216-884-11	METAL CHIP 0 5% 1/16W	
JC210	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC211	1-216-884-11	METAL CHIP 0 5% 1/16W	
JC212	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC213	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC214	1-216-884-11	METAL CHIP 0 5% 1/16W	
JC215	1-216-296-00	METAL CHIP 0 5% 1/8W	

KEY

Ref. No.	Part No.	Description	Remark
JC216	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC217	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC218	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC219	1-216-296-00	METAL CHIP 0 5% 1/8W	
JC221	1-216-884-11	METAL CHIP 0 5% 1/16W	
< LIQUID CRYSTAL DISPLAY >			
LCD201	1-801-196-11	DISPLAY PANEL, LIQUID CRYSTAL (US, Canadian, AEP, AUS, JE)	
LCD201	1-801-196-21	DISPLAY PANEL, LIQUID CRYSTAL (IT, EA)	
< TRANSISTOR >			
Q201	8-729-220-93	TRANSISTOR 2SK209-G	
Q202	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q203	8-729-220-93	TRANSISTOR 2SK209-G	
Q204	8-729-028-92	TRANSISTOR DTA144TUA-T106	
Q205	8-729-423-52	TRANSISTOR 2SC3931-C	
Q206	8-729-403-42	TRANSISTOR XN1401	
Q207	8-729-230-63	TRANSISTOR 2SC4116-YG	
Q208	8-729-403-24	TRANSISTOR XN4210	
< RESISTOR >			
R201	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R202	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R203	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R204	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R205	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R206	1-216-809-11	METAL CHIP 100 5% 1/16W	
R207	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R208	1-216-813-11	METAL CHIP 220 5% 1/16W	
R209	1-216-805-11	METAL CHIP 47 5% 1/16W	
R210	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R211	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R212	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R213	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R214	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R215	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R216	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R217	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R218	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R219	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R220	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R221	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R222	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R223	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R224	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R225	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R226	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R227	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R228	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R229	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R230	1-216-821-11	METAL CHIP 1K 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R231	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R232	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R233	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R234	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R235	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R236	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R237	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R238	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R239	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R240	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R241	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R242	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R243	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R244	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R245	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R246	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R247	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R248	1-216-843-11	METAL CHIP 68K 5% 1/16W	
R251	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R252	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R255	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R256	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R257	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R258	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R259	1-216-809-11	METAL CHIP 100 5% 1/16W	
R260	1-216-809-11	METAL CHIP 100 5% 1/16W	
R261	1-216-797-11	METAL CHIP 10 5% 1/16W	
R262	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R263	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R264	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R265	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R266	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R267	1-216-809-11	METAL CHIP 100 5% 1/16W	
R268	1-216-817-11	METAL CHIP 470 5% 1/16W	
R269	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R270	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R271	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R272	1-216-857-11	METAL CHIP 1M 5% 1/16W	
< SWITCH >			
S201	1-571-780-11	SWITCH, KEY BOARD (LIGHT)	
S202	1-571-780-11	SWITCH, KEY BOARD (FM STANDBY TIME 2)	
S203	1-571-780-11	SWITCH, KEY BOARD (LW/MW STANDBY TIME 1)	
S204	1-571-780-11	SWITCH, KEY BOARD (SLEEP)	
S205	1-571-780-11	SWITCH, KEY BOARD (DISPLAY MODE)	
S206	1-571-780-11	SWITCH, KEY BOARD (SW STANDBY MODE)	
S207	1-571-780-11	SWITCH, KEY BOARD (POWER)	
S208	1-571-780-11	SWITCH, KEY BOARD (PRESET/MANUAL)	
S209	1-571-780-11	SWITCH, KEY BOARD (ENTER/CLOCK)	
S210	1-553-977-00	SWITCH, SLIDE (HOLD)	
S211	1-553-510-00	SWITCH, SLIDE (NOMAL/FINE)	